


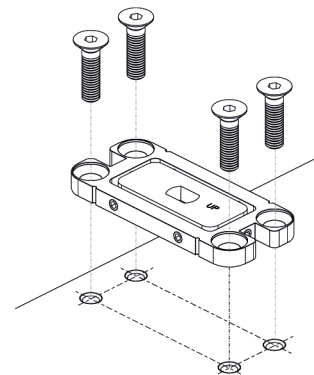
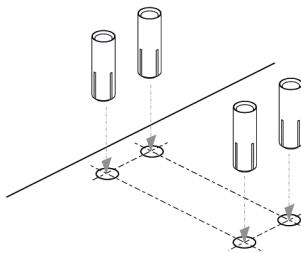
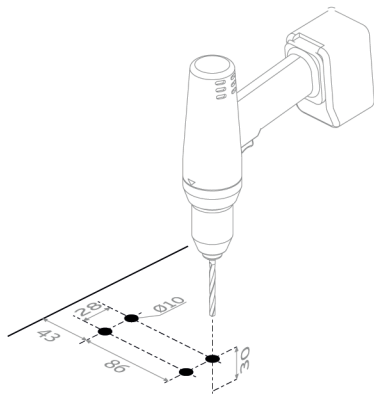


Door cut:


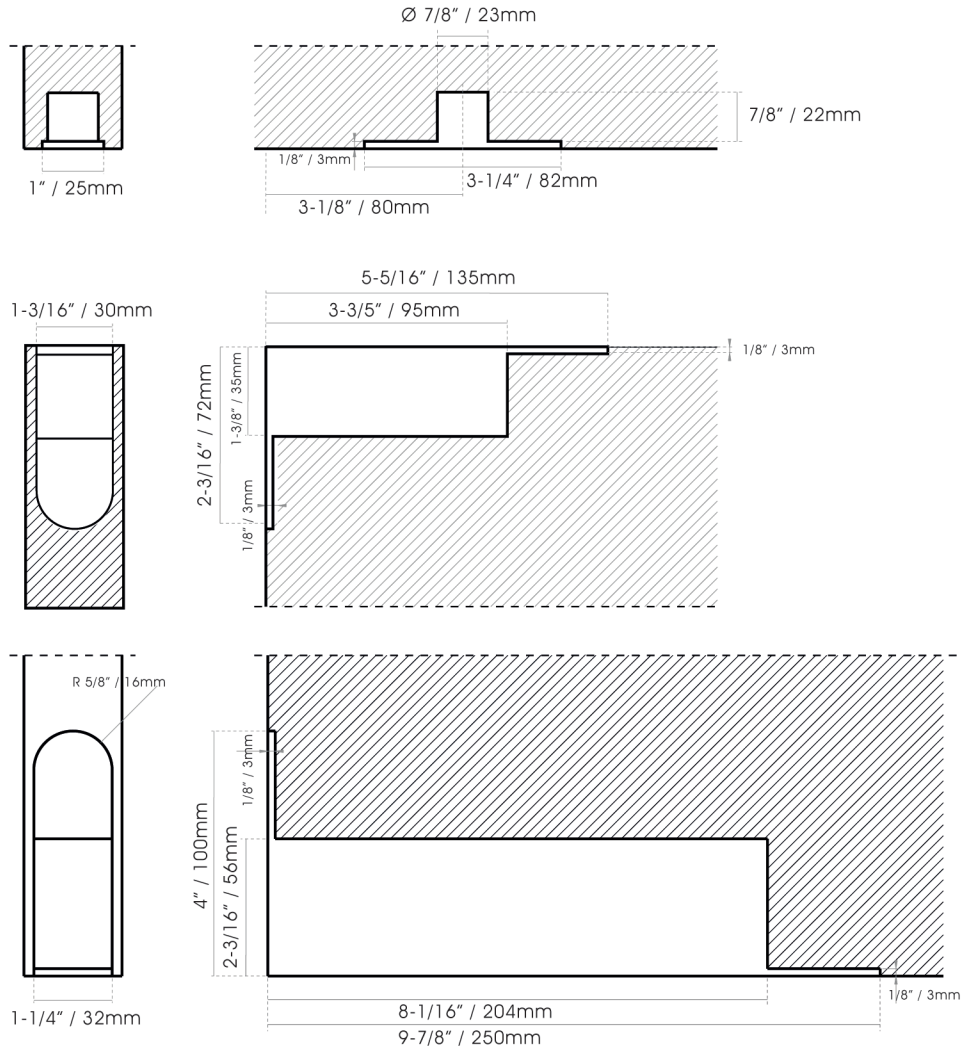


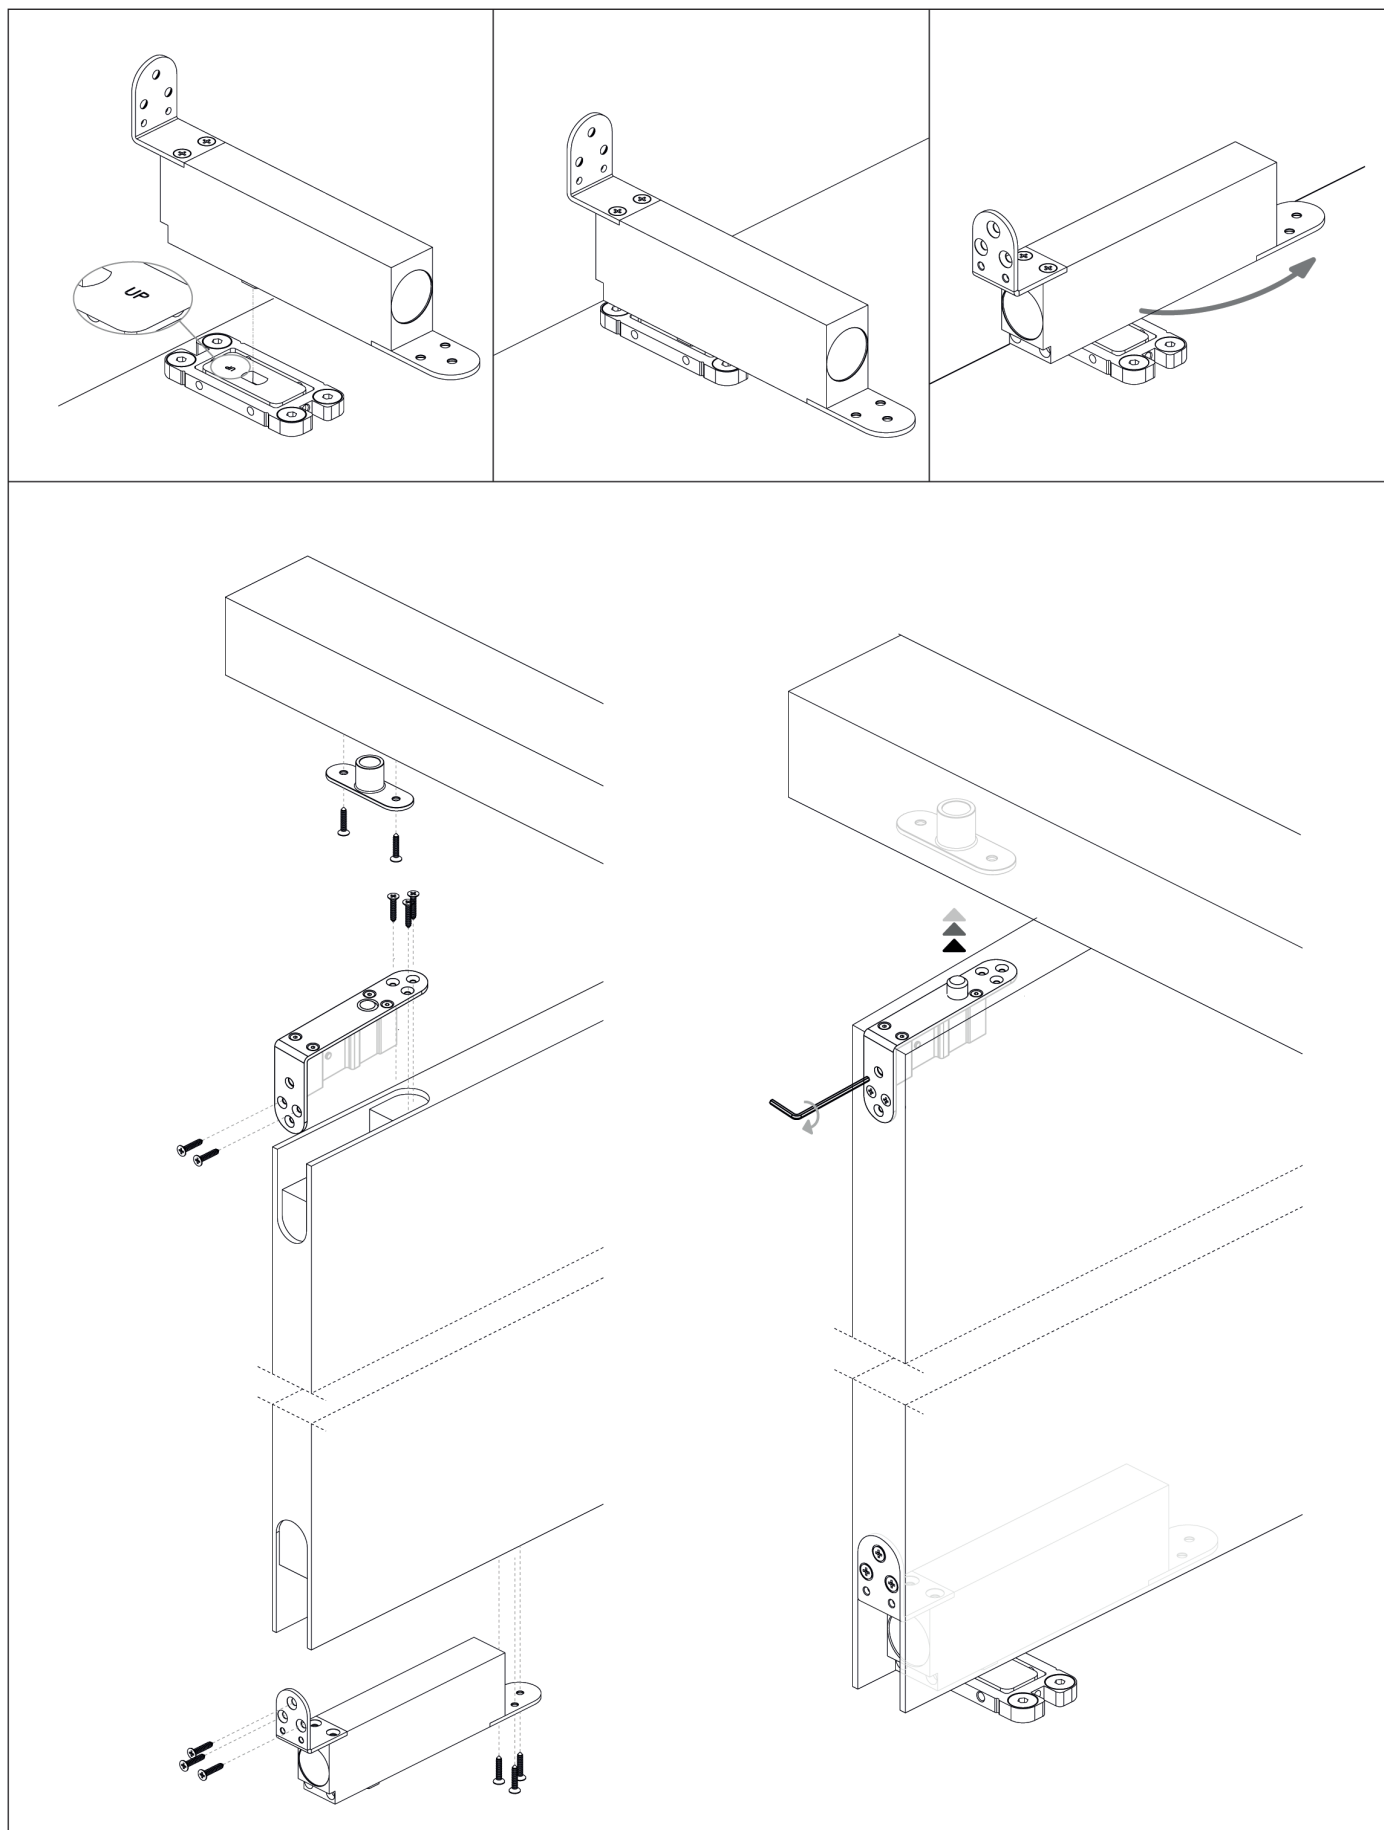

ADJUSTMENT

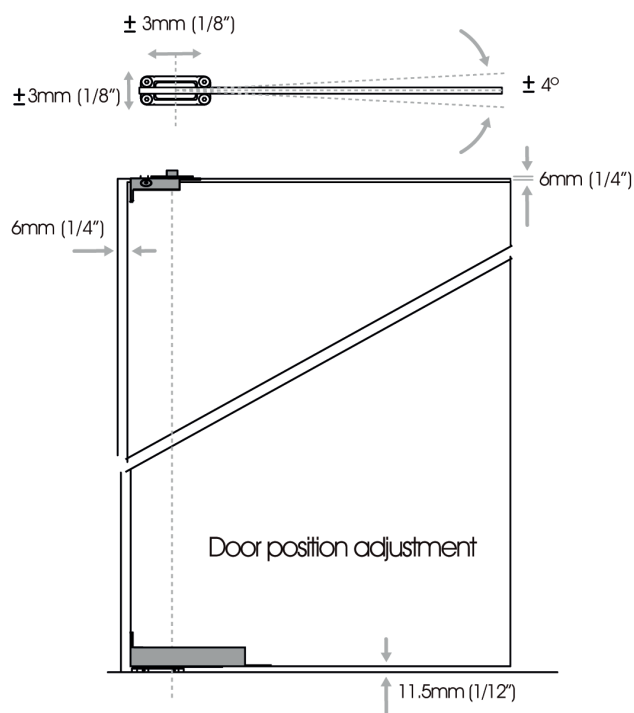

Speed adjustment valve

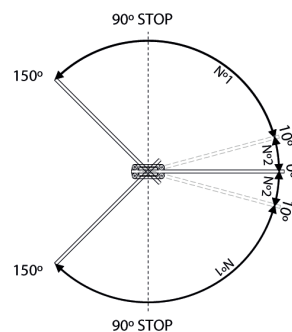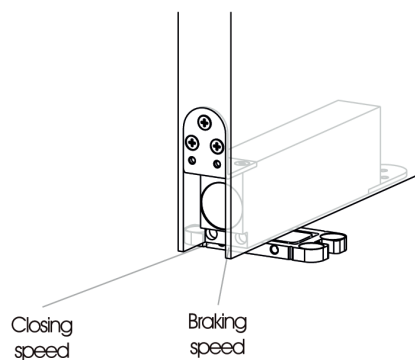

Adjust the door's alignment on base.
Check and lock the six adjusting screws, to guarantee
the good positioning and its function /

