

# DEADBOLTS

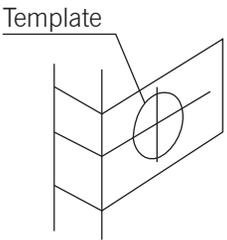
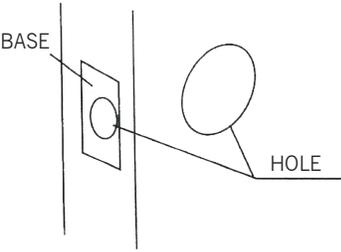
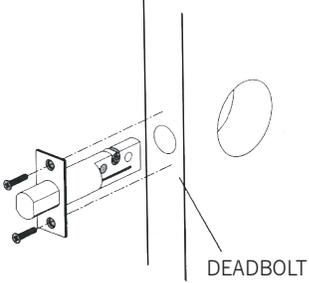
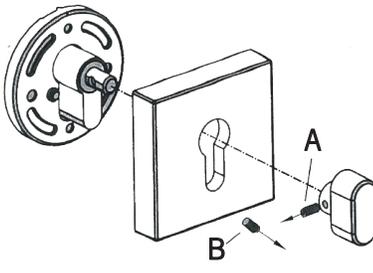
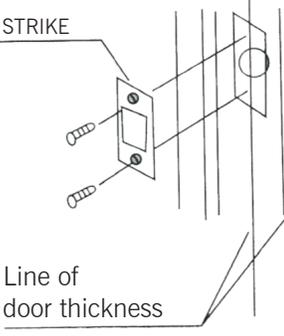
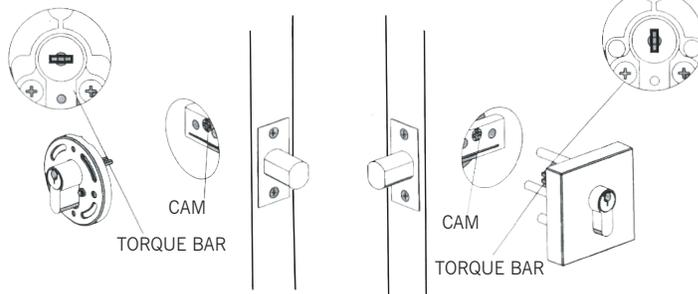
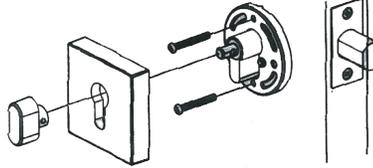
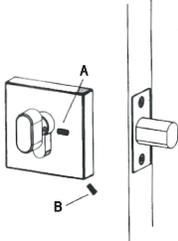
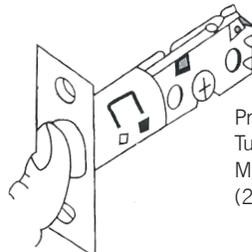
## DEADBOLT LOCK KEY-KEY



### Cod.SD02NE

### Installation guide

Unscaled format

<p>1.MARK DOOR</p>  <p>Template</p> <p>Mark site of lock and bore.</p>	<p>2.TALADRAR</p>  <p>BASE</p> <p>HOLE</p> <p>Bore the holes through door. Cut out base.</p>	<p>3.INSTALL DEADBOLT</p>  <p>DEADBOLT</p> <p>Keeping the arrow sign in the deadbolt always upward.</p>	<p>4.</p>  <p>A</p> <p>B</p> <p>Loosen the screws (A) and pull out the knob (if have), loosen the screws of cover (B) and pull out the cover.</p>
<p>5.INSTALL STRIKE</p>  <p>STRIKE</p> <p>Line of door thickness</p>	<p>6.INSTALL CYLINDER</p>  <p>CAM</p> <p>TORQUE BAR</p> <p>Keeping cylinder torque bar horizontally insert in to cam slot</p>	<p>7. DOUBLE CYLINDER</p>  <p>Prepare door exactly as in steps 1,2,3,4 and 6 above. <b>INSTALL INSIDE CYLINDER</b> Keeping cylinder torque bar vertically insert in to cam slot. <b>SAME AS STEP 5 ABOVE.</b></p>	
<p>8.</p>  <p>A</p> <p>B</p> <p>Install cover on the lock and tightening screws (B), then put the knob on lock and tightening screw (A).</p>	<p>INSTRUCTION FOR ADJUSTABLE DEADBOLT</p>  <p>Press the end of the deadbolt. Turn the latchcover pull or push. Make backset become 70mm (2 3/4") or 60mm (2 3/8").</p> <p>60mm (2 3/8") 70mm (2 3/4")</p>		

