DOOR LOCKS

ATENAS



INSTALLATION GUIDE

9508

Very Important!

This Fellino Lever Entrance Set is designed to suit either left or right hand opening doors. Please fasten all screws by hand and not an electric screwdriver or drill, as over tightening is not recommended.


▲ SAFETY TIP

When assembling or installing this product wear protective gloves and eyewear.

Instructions to install the Fellino Entrance Set.

If installing this lever set into a new door you will need the following tools: 25mm spade bit, 2mm drill bit, 54mm hole saw, corded or cordless drill, hammer, wood chisel, Phillips head screwdriver, tape and pencil.

If you are replacing an existing door handle you shouldnt require the drill, hole saw or spade bit as it will replace most standard door knobs and lever sets,

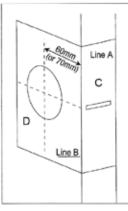


Step 1: Preparation

Cut template on Line (A) & fold on Line (B) as shown. Place on door at your preferred height and mark both the Latch Height (C) and centre of Handle Hole (D) with a pencil.

Remove template, and measure the thickness of door to mark the centre point of the door edge.

Use a 25mm spade bit to drill an accurate hole through the door edge, and using a hole saw, drill a 54mm hole through the door front.

Accuracy is vital so mark and measure carefully and drill holes level.

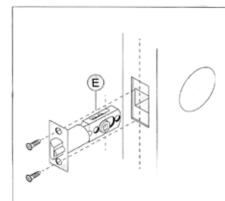

Step 2: Installing the Latch

Place Latch (E) into 25mm hole on side of the door and using sharp pencil mark door around the square plate, using hammer and chisel check out the timber so that the latch fits into the newly created recess and finishes flush with door.

Once completed push latch into place and drill 2mm pilot holes into edge of door, simply use screwdriver to insert the timber screws included.

