

# DOOR LOCKS

## ENTRANCE DOOR LOCK SETS - MANHATTAN




### Installation and Cutting Guide

### 2001

Unscaled format


### HOW TO INSTALL THIS SINGLE OR DOUBLE CYLINDER ENTRANCE HANDLE LOCKSET

#### 1.- MARK DOOR & BORE HOLES

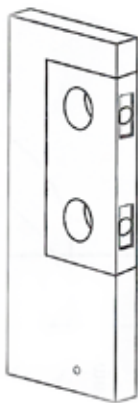


- Fold template over edge of door, mark 60mm(2-3/8") or 70mm(2-3/4") of holes
- Bore a  $\varnothing 54\text{mm}$ (2-1/8") a  $\varnothing 41\text{mm}$ (1-5/8") two  $\varnothing 25\text{mm}$ (1") and a  $\varnothing 8\text{mm}$ (5/16") holes through door.
- Cut two 58x26x3mm (2-5/16" x 1" x 1/8") base°

#### 2.-INSTALL LATCH

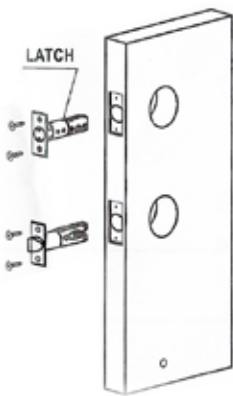


- Adjustable latch of 60mm(2-3/8") or 70mm(2-3/4") backset.
- Push the deadbolt inward keeping the arrow sight in deadbolt always upward

#### 3.- INSTALL OUTSIDE HANDLE

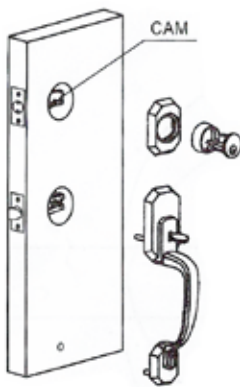


- Operating tail in outside cylinder insert into the cam horizontally


#### 4.- INSTALL INSIDE HANDLE (INSIDE KNOB/LEVER)

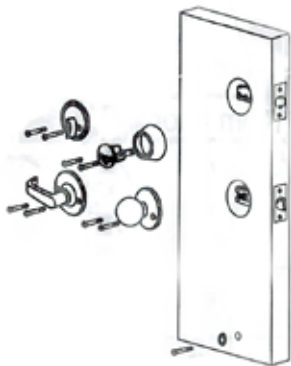


- Operating tail in inside cylinder insert into the cam vertically

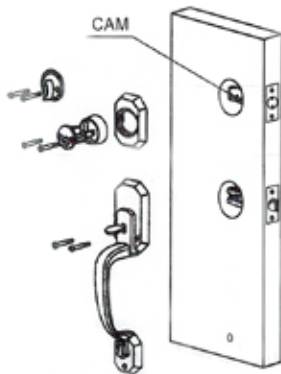


#### 5.-INSTALL STRIKE

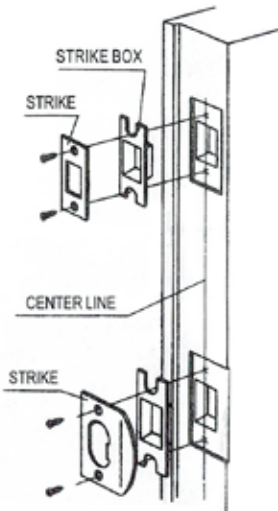

#### INSTRUCTION FOR ADJUSTABLE LATCH



The cam is pushed fully to the right for 70mm(2-3/4") backset. (During the adjustment, keeping two teeth of the cam to forward always).



Press the end of deadbolt, Turn the latch cover pull or push, make backset become 70mm(2-3/4") or 60mm(2-3/8")

# DOOR LOCKS

## ENTRANCE DOOR LOCK SETS - MANHATTAN



### Installation and Cutting Guide

### 2001

Unscaled format

